### Disabling Wireless in Mac OS X

- $\hfill\square$  1. Log on using the administrator account.\*
- 2. Select System Preferences from the Apple Menu.
- 3. If there is a *Bluetooth* icon, click on it and then click on *Settings*. If not, Skip to Step 5.
- □ 4. If Bluetooth Power is on, click the *Turn Bluetooth Off* button.



- □ 5. Click on the *Sound* icon at the top of the window and then click on *Input* within the Sound panel.
- □ 6. Click *Internal microphone* and set the *Input* volume to the lowest setting.
- 7. Click on *Line In* in the device list and set the *Input volume* to the lowest setting.



8. Line In should now be highlighted within the device list, indicating that it is the selected device for sound input. Make sure Line In is the device selected before proceeding with the next step.

- **9**. Click the *Network* icon at the top of the window.
- 10. If necessary, unlock the *Network* settings panel by clicking the *lock icon* at the bottom of the window and entering the administrator's password when prompted.



- 11. The 802.11 capability in MAC OS X is called Airport. Pull down the *Show* menu and select *Network Port Configurations*.
- 12. If *AirPort* appears in the Port Configurations list, disable it by clearing its checkbox.
- □ 13. If *Bluetooth* appears in the Port Configurations list, disable it by clearing its checkbox.
- □ 14. Lock the panel by clicking on the *lock icon* at the bottom of the window.

Additionally, Bluetooth and sound inputs must be disabled for each user on the system. Each user and future user account on the system **must**:

- 1. Log in as the user for whom wireless/mic capabilities are to be disabled.
- 2. Repeat Steps 2 8 above.
  Note: that any user on the system can re-enable Bluetooth and sound input for their account without administrative privileges.

\*If you do not have administrative or root privileges on your computer, request support from your local system administrator.

Published July 2005 I33-0007R-2005



#### www.nsa.gov

## So Your Boss Bought You a New Laptop...



# ...how do you identify and disable wireless Capabilities ?



### **Identifying Wireless Capabilities**

1. A Wi-Fi or Bluetooth logo sticker on the laptop indicates it *has* built-in wireless networking capabilities.



2. A wireless network connection icon, like that shown on the left side of the system tray below, indicates that the laptop does support wireless networking.

🔶 👷 🕹 🖉 🔍 🕹

3. A logo sticker on the laptop like those below indicates it may support wireless networking.



pentium M

 4. 802.11 cards can either be mini-PCIs located beneath a removable panel on the laptop's underside, as shown in the figure below, or external cards that plug into PCMCIA, Compact Flash, Secure Digital, Ethernet, or USB interfaces. These external cards must be physically removed while in NSA spaces.



- 5. Small dark red plastic windows on the laptop indicate infrared capabilities. These windows must be completely covered with metallic tape.
- 6. Although not a wireless issue, laptops have internal microphones that **must** be disabled using a 3.5 mm erasing plug inserted into the external microphone jack.

### **Disabling Wireless in Windows**

- □ 1. Log on as an administrator.\*
- □ 2. Open the *Start Menu*
- □ 3. If not using XP, open *Settings*. If using XP, skip to Step 4.
- □ 4. Open the *Control Panel*.
- 5. If using XP in the Category View, click *Performance and Maintenance*, otherwise skip to Step 6.

System Properties	? ×
General Network Identification Hardware	User Profiles Advanced
Hardware Wizard	
The Hardware wizard helps yo unplug, eject, and configure yo	u install, uninstall, repair, our hardware.
	Hardware Wizard
Device Manager	
The Device Manager lists all the on your computer. Use the De properties of any device.	ne hardware devices installed vice Manager to change the
Driver Signing	Device Manager
Hardware Profiles	
Hardware profiles provide a w different hardware configuration	ay for you to set up and store ns.
	Hardware Profiles
OK	Cancel Apply

- □ 6. Double-click on the *System* icon.
- □ 7. Select the *Hardware* tab.
- □ 8. Click the *Device Manager* button.

🖳 Device Manager		
Action View 🛛 🖛 🔿 📾 📧 😪		
Acton  Yerw  ← →  Image: Action of the set of		
④ 야한 Universal Serial Bus controllers		
	 	[

 9. Click the + sign to the left of the Bluetooth device, right click on the Bluetooth adapter, and select *Disable*.

- 10. Click the + sign to the left of the Network adapters, right click on the wireless adapter, and select Disable.
- □ 11. For Windows XP:
  - a. Open the Start Menu.
  - b. Open Administrative Tools.
  - c. Open Services.
  - d. In the right pane, double-click the *Wireless Zero Configuration* service.
  - e. Under *Startup type* select *Disabled* from the pull down menu.
  - f. Under Service Status, click the Stop button.
  - g. Once the service has stopped, click *OK* to finish.

### **Disabling Wireless in Linux**

(Applies only to Fedora Core 3)

- 1. Log on as *root* user (only root has the permissions to run the following commands).\*
- 2. Open a command prompt (xterm, shell tool, cmd tool, etc.).
- □ 3. Issue the command **ifconfig –a** to get a listing of available network interfaces.
- 4. Decide which interface(s) to disable. Anything with *wlan* or *wifi* in the interface name is most likely wireless, but sometimes interfaces such as *eth1* are as well.
- $\Box$  5. Run the command

**ifconfig [interface] down** To disable an interface, run this command for all interfaces that need to be disabled using Step 3.

Example: ifconfig wlan0 down

When the computer is returned to an area approved for wireless networks issue the following command to enable the wireless adapter:

ifconfig [interface] up